

Factory Reset Camera - Button


service@ltsecurityinc.com.au
www.ltsecurityinc.com.au
(02) 91500787

1. Disconnect camera from power (POE Cable or 12v DC)
2. Hold down reset button
3. Connect camera to power (while holding reset button for 30-40 seconds) then let go of button

CMIP33** Series & CMIP38** Series



CMIP30** Series

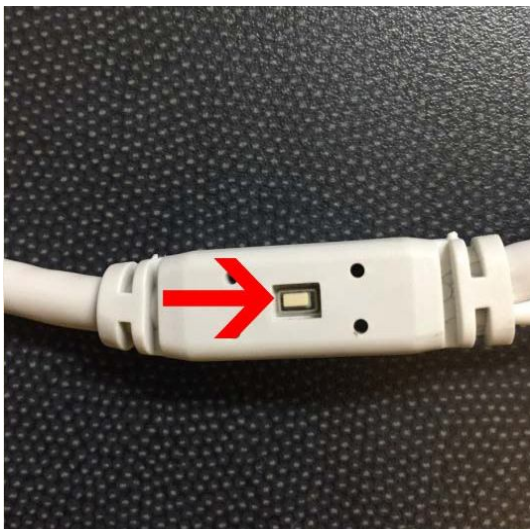

Factory Reset Camera - Button

CMIP98** Series



CMIP78** Series



Factory Reset Camera - Button

service@ltsecurityinc.com.au
www.ltsecurityinc.com.au
(02) 91500787

CMIP73** Series

